



VR Technology Limited

Model Name

VRX

Manufactured by

VR Technology Limited
Unit 12 Blackhill Road West
Holton Heath Industrial Estate
Poole
Dorset
BH16 6LE
England

EC Type Examination Conducted by SGS United Kingdom Ltd., Unit 20 2b Worle Parkway, Weston-super-mare, BS22 6WA. Notified Body No 0120

CE Declaration

EC Type certification under the Directive 89/686/EEC has been granted to this device as a Diving Safety Device when used in conjunction with one of the following accessories.

- i. HP Link Safety Device for Diving (EN 14143:2003, EN 250:2000.)
- ii. 4th Cell Connection – Safety Device for Diving (EN 14143:2003)
- iii. URM Safety Device for Diving (EN 14143:2003)

This product complies to EN 13319:2000

WARNING

Diving is an adventurous sport and should not be undertaken without receiving the necessary training from a recognised training agency.

Contents

Introduction.....	3
Getting Started.....	4
Battery.....	4
Switches.....	4
Home Screen.....	5
Pin Number System.....	6
How to Enter a PIN.....	7
Notes on the Battery.....	8
Mini Screens & Pre Dive Check.....	9
Time & Date Screen.....	10
Powering up the VRX.....	10
Decompression Algorithms.....	11
Dive Options Screen and Functions.....	12 – 13
Gas Calculator Mode.....	14
OPTIONS Menu.....	15 – 16
Gas List and Profile.....	17
Bailout - A Special Note for CCR Divers.....	18
Games, including Deco Books.....	19 – 20
SETUP screen.....	21 – 25
NO STOP screen.....	26
FLYTIME screen.....	26
SELECT & ADJUST gases Open Circuit & CCR.....	27 – 30
Display Modes Screen.....	31 – 32
Log Book Screens.....	33 – 35
Warnings.....	36 – 39
Rebreather & Analyser Cable Links.....	40 – 52
Oxygen Sensors.....	53
Warranty & Support.....	54
Maintenance Tips.....	55
Troubleshooting.....	56
Specifications.....	57
How to read the Main Dive Screen.....	58 – 61
How to Switch Gas during a Dive.....	63 – 64
Other Dive Screens.....	65
Changing or Adding a New Gas During a Dive.....	65
Going from the Main Dive Screen to Other Dive Screens.....	66
VRx additional features.....	67
Display Modes.....	67
Automatic display flip.....	67
Twist mode for mini screen jumping.....	67
Torch.....	69
Colours.....	69
Battery.....	70
Power Monkey charging option.....	70
VGM decompression algorithm.....	71

VR Technology Limited

Congratulations on your purchase of a VR dive computer.

You are going to have a lot of fun learning how to use your new VR.

Your VRX has been delivered to you in G10 mode. This is the latest version of VRX software and, we believe, represents a considerable advance over earlier versions.

If you prefer, you can run the VRX in G3 mode which is almost identical to G10 mode but only allows you to preset three gases in the gas list.

You can also operate the computer in X10 mode which takes the VRX back to the 2007 version of the software. This might be preferred by VRX owners with long experience of the computers who have reached the point where they have an instinctive acquaintance with the way the computer used to work and prefer not to learn new navigation techniques.

Your VRX is delivered to you in multicolour mode. If you have ordered the multicolour upgrade from new then of course multicolour mode will be permanent. If you have ordered a single colour VRX you will be able to enjoy multicolour mode for your first three dives so you can see what it looks like before your computer reverts to single colour mode. If you then decide you preferred multicolour mode just call your dealer and buy the multicolour upgrade PIN and install it.

Getting Started

Looking at the computer (image below) in your hand



Battery

The battery compartment is at the top of the case, accessible via the battery cap which is opened using the dedicated black two-pronged key that came in the box with your computer.

The VRX is powered by a single AA battery.

Switches

On the left and right at the bottom are two black plastic slide switches which you use to navigate your way through the functions of the computer either on the surface or underwater.

The switches work in four ways, as follows:-

A short push and release of one switch

A push and long hold of one switch (hold the switch in until the screen changes.)

A short push of both switches.

A long push and hold of both switches (again, hold the switches in until the screen changes.)

In some cases 3 and 4 are shown as < > with the option between the arrows. Your VRX is activated by pushing and holding either switch. The first screen to be displayed will be the Home screen.

Home Screen



The Home Screen features

- The current active gas, (top left hand corner)
- The current remaining battery voltage, (bottom left)
- A BAT LOW advisory when the battery voltage drops to 1.1V and an alkaline battery is being used or 2.8V when a 3.6V battery is being used.
- The Pre Dive Check mini screen feature, (on Start Up the log screen shows first, giving you a profile of your most recent dive.)
- A gas bottle graphic in the bottom left corner
- A menu graphic in the bottom right corner
- A GO graphic in the centre at the bottom

When the VRX is sleeping and the Home Screen is still active, only the selected Mini Screen, active gas and a flashing BAT LOW warning will show.

Understanding Our PIN Upgrade System

VRX Dive Computers can operate on four levels :-

Level C1: Open Circuit Air / Nitrox

Level C2: Open and Closed Circuit Air / Nitrox

Level C3: Open Circuit Air / Nitrox / Trimix

Level C4: Open and Closed Circuit Air/ Nitrox / Trimix

The computers are sent out of the factory as level C1 Open Circuit Air / Nitrox units but all are fully loaded with every currently available level and feature including the permanent Multicolour screen upgrade. These levels and features are locked but can be activated by purchasing and installing a number of unique dedicated 16 digit PINs.

If you bought your VRX at level C2, C3 or C4, the PIN required to activate this level, along with the PIN or PINs for any other features you have purchased, including Multicolour screen, can be found on white strips attached to the plastic CD envelope that came with the computer. Please keep a note of these PINs, and any other PINs you subsequently purchase, in a safe place.

To activate the purchased level and features, enter the 16 digit PIN(s) following the procedure outlined below. To purchase further level upgrades or activate additional features, contact your VR Computers dealer. So that the dealer can give you the correct PIN(s), when you make the purchase you will need to provide the unique 16 digit serial number of your VR. This Serial Number is on line 4 of the Pin screen which can be found in the SETUP menu.

The SETUP menu is accessible via the mini screen feature in the Home screen.

How to enter a PIN

PINs are keyed in using the switches and are logged in on the bottom line of the Pin Num screen. A short push on a switch will move the number highlighted by 1; a long hold will move it by 8. When keying in each digit or letter move forwards using the right hand + switch. Do not move backwards using the left hand - switch except to correct, as this may cause previously entered numbers to change. After you have keyed in the last digit of your PIN there will be a pause before the cursor moves to the top of the screen you can use the left and right switches to key in your name and phone number, or any other data you wish, in order to identify the VR computer as yours, (see below).

After a PIN has been successfully installed the bottom line of the screen will revert to 16 zeros.

Security and Trace-ability

A key benefit of the PIN system is the security and trace-ability it offers. In order to change or remove the identifying particulars you have installed, someone would need one of your PINs so keep them in a safe place away from your VRX. Then, if your computer is ever lost or stolen, notify us and, as your identifying particulars will still be there on the screen, we can look out for it in the event that it ever comes in to us for repair or upgrade. Also don't forget to write to us and register ownership via our website, www.VRx.co.uk. If you lose your PIN(s), we can only reissue them to you if we have you listed as the owner. If you should ever sell on your computer, you will need to give the new owner the PINs so that the security information can be changed.

Notes about the Battery and Cap

The battery cap is protected by a pair of O-rings which should be replaced after 10 battery changes or if they become damaged or worn. Replacement O rings are available from your dealer, (item C36 in our Accessory List or as part of our Field Triage Kit.)

The battery must be inserted positive + end first or the VR will not work. Check the battery spring is in the cap before inserting the battery. The battery must move freely on the spring. If the battery coating is too thick and fits too tightly in the cap, this may lead to power supply problems during the dive and the computer will shut off. Make sure the cap and body threads are clean as these provide the system earth. When replacing the battery compartment cap, screw it in until it will screw in no further.

When changing the battery it is good practice to turn the unit on first and then let it turn itself off again so the internal battery is fully charged. Install a new battery within 30 seconds of removing the old one to avoid the risk of losing some stored data.

Battery life is highly dependent on the operating mode of the active backlight. To conserve power set Tm instead of ON or Don as the light setting in the Dive Modes screen. Keep an eye on the battery voltage reading in the Home Screen.

Remember that lithium batteries have a faster discharge curve than standard cells and although they last longer, they discharge quickly towards the end of their life. When a lithium battery's voltage begins to drop quickly, change it.

If you are not planning to go diving for an extended period, (say three months or more), to avoid any risk of the battery leaking while in storage and damaging the computer, remove it. If you are keeping a PC log of your dives, download them first.

Install a new battery just before you are about to start diving again. Note that you will need to restore your gas list and set up data.

The Home Screen – Navigation via Mini Screen Feature



Pre Dive Check

The Mini Screen feature in the Home Screen is designed primarily to make it easy for you to check the settings in your VRX and allow you to change any of the settings if necessary before you dive.

A short push on either the right or left switch will allow you to move through the mini screens one by one. A short push of both switches <GO> will expand whichever mini screen is currently showing and allow you to change settings within the screen.

The mini screens appear in the following order with successive short pushes of the right hand switch

- Log
- Gas List
- Dive Options
- Fly Time
- Set Up
- Display Modes
- Time & Date
- No Stop Plan
- Gas Calculator (a PIN upgrade option: see Gas Calculator Section)
- Oxygen Sensor (a PIN upgrade option: see Rebreather Link and Oxygen Analyser sections)

A long push of the left hand switch at any time in the Home Screen will take you into the Gas List so you can set up, select or adjust the gas mixes you are planning to dive with as well as set your computer to open circuit or closed circuit decompression calculations.

A long push of the right hand switch will take you into the Options Menu which will give you access to five further features, as follows



Time & Date Screen



The VR meets the European PREN standard for digital dive timing devices but it is not a precision chronograph. You may need to adjust it occasionally in order to display the correct time.

Changing the time will not affect desaturation calculations.

A short push of the right switch + will increment the highlighted field by one, a long push by ten.

A short push of the left hand switch will decrement the highlighted field by one, a long push by ten.

A short push of both switches together will move the highlight to the next field.

A long push of both switches will exit the screen, save the changes and return you to the home screen.

Powering up the VRX

It is not necessary to power up the VR before you dive. The screen will automatically power up within a minute of exposure to an absolute pressure of 1.3 Bar or greater. Note that this means in practice that if you do a very fast descent the VR computer may not switch on until you are at depth.

If you want the screen to be on from the moment you enter the water, power up the VR before you dive and push either switch once. The screen will stay active for 5 minutes. (On the surface, if no switch is pushed the VR will turn itself off after about a minute to save power.)

Decompression Algorithms

VR dive computers use a derivative of the Buhlmann ZHL 16 algorithm modified to assimilate the latest thinking in practical micro-bubble avoidance for enhanced decompression safety.


You will note that on all decompression dives, the VR will prompt for deep-water controlling stops of 2 minutes in duration. Deep-water stops are recognised by their duration (normally two minutes) and a + next to the time. It is important that these stops are conducted correctly for a safe decompression as they help to reduce the problems associated with potential micro-bubble growth during an ascent.

Should a microbubble stop be missed, a “Use tables” message will appear. The decompression schedule displayed thereafter, although very close to the required duration, may be in error. If this occurs consult backup tables and add additional stops or stop time as required. While continued diving with the VR is possible, the decompression displayed may not be exact. “Use tables” will show for 24 hours.

There is also an optional upgrade available which gives VR owners a choice between the standard decompression algorithm (above) and an alternative algorithm incorporating a variable permeability model (VPM). This upgrade can be activated simply by purchasing and installing a PIN. (Ask for the V1 upgrade PIN.) Depending on gas selection and dive depth and time, the VPM based option may provide a reduced decompression requirement compared to the modified Buhlmann algorithm, although this is not always the case. What it does is smooth out the profile. There are no deep micro-bubble stops and ‘normal’ decompression stops begin much deeper. In general, intermediate stops are longer and shallower stops are shorter.

A major advantage is that after activating the V1 upgrade you still have access to the original Buhlmann algorithm and can even switch between the two algorithms from dive to dive if you wish depending on the type of diving you are doing. This is possible because although the decompression profile on your VR screen reflects only the selected algorithm, the computer still records tissue and bubble states using both.

The Dive Options Screen

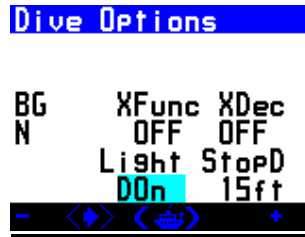

In surface mode the Dive Options (DVo) screen is accessible from the Home Screen, (toggle through the mini-screens).

Underwater, the Dive Options (DVo) screen is accessed by a short push of both switches when you are in the second dive screen. You get to the second dive screen from the main dive screen via a long push on the right switch.

The screen allows the diver to get quick access to a number of useful controllable features.

In this screen, a short push of both switches will move the highlight from one feature to the next, a short push of either the left - or right + switch will change the setting. If you do not have a particular feature enabled, the highlight will not land on it.

XFunc

Change XFunc to correspond to the type of sensor connected to the I/O port:

- i. OFF = no sensor connected. When no sensors are connected XFunc should be set to OFF to avoid connector damage.
- ii. ii. XO2 = External PO2 sensor (analyzer or rebreather) connected.

XDec

This feature is enabled when you purchase one of our rebreather linking cables and the relevant software to allow you to track real time decompression via an external oxygen cell. In closed circuit mode the XDec setting controls which PO2 figure is used in the decompression and tissue updating calculations. (In semi closed mode the PO2 is reported as an FO2).

To summarise, when XDec = ON the reading from the external sensor is used.

When XDec = OFF the selected gas and internal setpoint are used.

BG (Big Graphics)

(This is only available with the VRX in X10 mode.)

When you buy the PIN to activate Gas Calculator mode in your VR (item UG 15) you also get the PIN for Big Graphics Mode free of charge. This enables you to double the size of the depth and time digits in the Dive Screen with the VRX in X10 mode only. Note that CNS% and Time to Surface (TTS) information will not appear on the Dive Screen while Big Graphics Mode is ON. Your No Stop Time (NST) remains visible, as do your decompression ceiling and time at stop if you are carrying out a decompression dive.

Light

Switch between three screen backlight modes

Tm..... Light on for 10 seconds at the surface or underwater

On..... Light always on at the surface and underwater

DO..... Light off at the surface, light on underwater

Stops

Switch between 3 optional final decompression stop depths, 3m, 4.5m and 6m.

Gas Calculator Mode

	Have	Want	Add
C	0	200	BAR
o2	21%	21%	0
he	0%	0%	0
Air	-----		200
MaxD	EAND	PPo2	
50m	50m	1.26	

- < > (Home) +

You have the option to purchase a PIN to activate this feature. When this mode is enabled, you can gain access from the Home Screen, (toggle through the mini - screens). Gas Calculator mode will allow you to work out partial pressure gas fills on your VRX.

To find out what gases you need to add to adjust a gas mix, enter your current cylinder fill in the HAVE column and the gas mixture you need in WANT. The ADD BAR column will automatically show the fill pressures to add.

If you are filling an empty cylinder, leave the HAVE column at 0 (zero). You can also define the WANT column by changing the MaxD (maximum depth), EAND (Equivalent Narcotic Depth) and PPO2 settings.

In this screen, a short push of both switches will move the highlight from one field to the next and a short push of either the left - or right + switch will change the highlighted number by 1. A long push of - or + will change the highlighted number by 10. A long push of both switches will return you to the Home Screen.

OPTIONS

From Home screen a long push on the right hand switch takes you to OPTIONS.



In the OPTIONS screen a short push of the left switch moves the highlight downwards. A long push on the left switch moves the highlight upwards.

A short push on the right switch takes you into the highlighted feature screen. A short push on both switches returns you to the Home screen.


The features and functions in the OPTIONS Menu are

Language



Gives you a choice of English, French, German, Spanish, Italian, Polish and Russian

Games

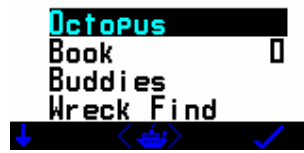

Shows you the games you can play on decompression

PC Link



The screen to go to if you want to download dives from your VRX to a PC.

Simulate

Simulate mode gives you a chance to practice using the computer in the dry before taking it under water. A long push to the DIVE display and a depth of around 10m will be displayed. Short pushes of the left and right switches will increment or decrement the depth. To exit a simulated dive do a long hold of both switches or ascend to zero depth.

Dive plan



Once you have set your planned dive gases in the VRX, Diveplan allows you to enter depth, time and surface interval and calculate a set of backup tables.

A short push of both switches moves between fields. A short push on either the left or right switch adjusts the number in the highlighted field.

Once the parameters are set, a long push of the both switches will display a dive screen.


There will be a slight delay while the VR computes the plan.

In the dive screen long pushes on the right switch will show page after page of decompression stops as in normal Dive mode.

Simulate and Diveplan work on current tissue state. If you have just dived with the VRX your residual inert gas loading will be taken into account by the VRX in its calculations.

Mini Screens

GAS LIST

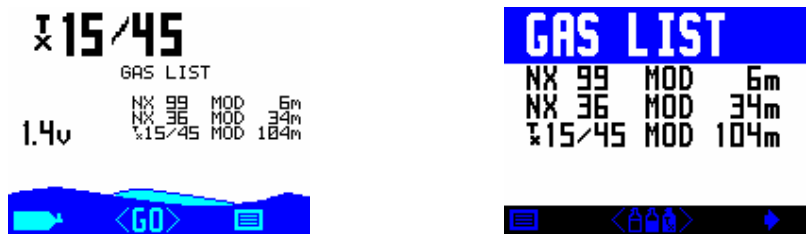

The gas list is accessible via the mini screen feature in the Home Screen. It shows you at a glance which gases you have currently active on your VRX and the maximum operating depth you have set for each.



A short push of both switches in the GAS LIST screen takes you to PROFILE which you can use to programme sets of gases, as follows.

First select which gases you want to include in a gas profile. Use the right-hand switch + to pick a profile memory into which you want it saved (A, B or C). A long push of both switches saves the selection.

Repeat the process to set up other PROFILES. A short push on the left-hand switch will return you to the Home screen.


Any time you want to choose a saved profile, return to the PROFILE menu and use the right-hand switch + to bring up the profile you want (A, B or C). A short push of both switches <Get> programmes the selected Profile of gases into your VRX. You will see the word RESTORED. Then a short push on the left switch takes you into the ADJUST screen where a long push on both switches takes you into the SELECT screen. Here you can double check which gases you have set by repeated short pushes of the left switch. If they are correct a short push of the right-hand switch returns you to the Home screen.

Bailout! A Special Note on Profile B for CCR Divers

If you are a CCR diver, you can use Profile mode as a convenient way to set your bailout gases and enable you to install in Profile B the bailout gases that you will be carrying on the dive.

Follow the instructions above on how to add and save a profile.

Then, if during the dive you then find you have to bailout to open circuit, you access a new Bailout screen with a long push on the left switch from the dive screen then a long push on both switches to take you to Open Circuit.

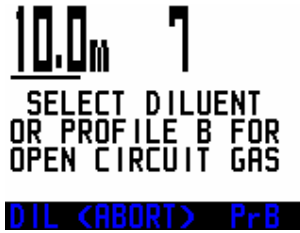

The screenshot shows a digital display with the following text: '10.0m' and a right-pointing arrow at the top. Below that, the text reads 'SELECT DILUENT OR PROFILE B FOR OPEN CIRCUIT GAS'. At the bottom, there are two options: 'DIL <ABORT>' and 'PrB', with 'DIL <ABORT>' highlighted in a dark blue bar.

There you have the option either to bailout to your diluent gas with a long push on the left switch (DIL) or bailout to the gas or gases that you have preset in profile B with a long push on the right switch (PrB).


Cancel the bailout with a long push on both switches <ABORT>

Check the details are correct on the select screen, confirm with a long push on the right switch and confirm again with a second long push on the right switch. Decompression will now be calculated based on your bailout gas or gases. (Once the first gas in the bailout profile is confirmed any others in the profile will appear as a prompt when their MOD is reached).

If you enter the Bailout warning screen in error a long push on both switches (ABORT) will return you to the main dive screen.

Note: If you are diving with your VRX connected to your CCR via a cable, XDec has been activated and you are running on real-time decompression based on the PO₂, the external cell reading is automatically switched off as soon as you switch to Open Circuit.

GAMES

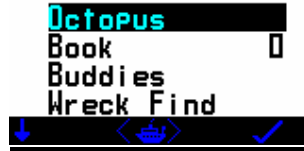

THE OCTOPUS GAME

The Octopus Game works like this: The aim is to try to hit the white octopus with a squirt of ink from the black octopus. The white octopus will explode when he is hit and you will then get a summary of your score. In the game screen short pushes of both switches will move you between Ang (angle), Vel (velocity) and Fire modes. When you are in Fire mode a jet of ink will squirt from the black octopus and, if your angle and velocity are correct, you will hit the white octopus. If not, you need to adjust the angle and velocity settings and this you can do in Ang or Vel mode, by a short push of either the right hand + or left hand - switch. (A long push will increment or decrement the setting by 10). While you are firing you will see Tide appear. This is a random setting; the strength and direction of the tide will change from game to game just so that it does not all become too easy!

DECOBOOKS AND MORE GAMES

Please note: You must have purchased and installed in your VR Computer both the C11 Downloading PIN AND the UG 15 PIN add on downloading package in order to use these features. Please consult your dealer to purchase. After you have bought and installed the DecoBooks PIN, go to your VR computer's OPTIONS MENU and scroll down until Games is highlighted. Then a long push of the right switch takes you into the screen where you will see four options, Octopus, Book, Buddies and Wreck Find. Octopus, Buddies and Wreck Find are your game options, (see details below). Book is your DecoBooks viewing screen. A short push of the left switch scrolls through the options. A long push of the right switch takes you into the option you have selected. The number next to Book option shows how many characters are currently loaded. The VR computer can take a maximum of 20000 characters at a time, (around 40 pages).

DECOBOOKS

Enter ProLink on your PC and click on Book send. Select a .txt file from your PC and check it appears in File Name box. Ensure your VR computer is in PC Link mode and Connected. Click on Book send. You scroll through pages using the left and right switches. A single short push scrolls one page. A long push scrolls 1000 characters. The number (in this case 0) in the lower menu area shows the cursor position in the file. When you have finished reading and leave the screen, your VR computer will remember where you left off and return you to the same point in the file when you next open the screen. A short push of both switches returns you to the Dive Screen. The book-viewing screen shows text from the book that has been uploaded into the dive computer. You can download text (.txt) files from any source to your PC (see next page). If files are in another format save them as .txt files in Notepad before transferring them to your VR computer. Please note that you can only transfer and store in the VR computer 20,000 characters at one time so divide large texts such as novels into sections.


Buddies Game

The idea of this game is essentially the same as the card game Pairs. You as the player are seen on the screen as “?”. Use the left and right switches to move around the screen. Short switch pushes move you left and right, a long push on the left switch jumps up a row, a long push on the right switch drops down a row. When you are over a particular card a short push of both switches will turn the card over and reveal a letter or symbol. Once that letter or symbol is revealed, your task is to find the same card in another position and reveal it with the next turn of a card. If you are unsuccessful both cards turn face down again. If you are successful the selected cards disappear. The aim of the game is to find all the pairs until no more cards remain. Each attempt to find a pair is recorded as a try in the bottom left hand corner. The best score, i.e. the lowest number of attempts needed to clear the screen, is displayed.

Wreck Find Game

There are pieces of a shipwreck hidden in the sand. You as the wreck -finder are seen on the screen as “?”. Use the left and right switches to move around the screen. Short switch pushes move you left and right, a long push of the left switch jumps up a row, a long push of the right switch drops down a row. When you think you might be over a piece of wreckage a short push on both switches will reveal what is hidden below you. Each piece of wreckage is shown as a cross. When you have found all ten pieces of wreck, the game finishes. The idea is to find them all in the fewest number of attempts. The number of attempts in the current game to date is shown in the bottom left of the screen. The best (lowest) score is displayed in the bottom right of the screen. It is mostly a game of chance but if you are a true wreck -finder you can bring in an element of skill to find the wreckage more quickly and get a better score, (think “Battleships”!!) A long push on both switches exits Games.

SETUP

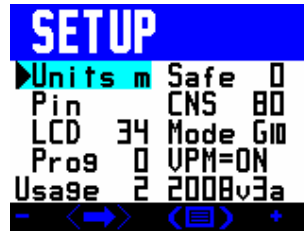

Selecting SETUP from the Mini-Screens in the Home Screen will give you access to a range of sub-menus, which allow you to configure the VRX according to your personal preference.

A short push of both switches moves the highlight to the next setting. A long push of both switches takes you back to the Home Screen.

Units

When “Units” is highlighted, a short push of either the right-hand + or left-hand - switch will change the depth and temperature settings in your VRX from metric (m) to imperial (ft) or vice versa.

Safe


This enables you to make the VRX’s decompression calculations more conservative.

A push on the right-hand + switch or left hand – switch when “Safe” is highlighted changes the setting by 10%, from 0% up to a maximum of 50%.

Every 10% increase adds a theoretical 2% to the inert gas content of the gas selected for the purposes of decompression calculation.

Pin

When “Pin” is highlighted a short push on either switch will take you into a screen where you will see

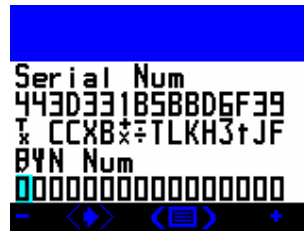

- a) your VRX’s 16 digit Serial Number
- b) a list of letters and numerals denoting which VRX features are currently enabled
- c) a line of zeros where you can input PINs to activate new features
- d) an empty space at the top of the screen where you can key in your name, telephone number or anything else you wish to add to identify the computer indelibly as yours.

CNS

A push on the right-hand + switch or left hand – switch when “CNS” is highlighted will change by 10% the level at which you want the CNS Air Break warning to appear in your dive screen, from 80% up to a maximum of 200%.


LCD

On Single Colour VRXs, LCD is the contrast control feature. A second screen is accessed by a short push on the right switch. Increase the number to make the screen darker. Reduce the number to make the screen brighter.

A short push of both switches <Inv> causes the screen colours to become inverted.



On Multi-Colour VRXs, LCD takes you to the Color Modes screen which allows you to change the colours associated with particular functions and areas of the VR screens.

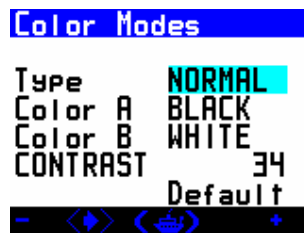

If you are happy with the default colours that we have selected for your VRX there is no need to adjust anything in this screen. If you want to adjust the colours, follow the instructions below:-

When you first enter the screen the panel next to “Type” will be highlighted. “Type” refers to a particular area of the screen. Use short pushes on the right -hand + or left-hand - switch to move from area to area. There are eleven areas: -

NORMAL - this is the middle area of each screen.

HILITE - this is the colour used to highlight.

MENU - this is the lower area of each screen that defines what each switch will do at any given time

HEADER - this is the upper area of each screen

MAIN-HD – these are the colours used for the title section of the mini screens in the Home Screen

MAIN-GR – these are the colours used for the main section of the mini screens in the Home Screen

MAIN-TP – these are the colours used for the main section of the Home Screen

MAIN-BM – these are the colours used for the bottom section of the home screen

GRAPH – these are the colours used for the graphs in the dive and log screens

SCROLL - these are the colours used for the opening logo screen.

SCR RB – these are the colours used for the screen saver in Universal Rebreather Monitor mode

Each area has two colours associated with it, Color A, the foreground (text) and Color B, the background colour.

A short push of both switches will highlight Color A and, while this is highlighted, short pushes on the right-hand + or left-hand – switch will change the foreground (text) colour in the section listed next to “Type”.

A further short push of both switches will highlight Color B and, while this is highlighted, short pushes on the right-hand + or left-hand – switch will change the background colour in the section listed next to “Type”.

CONTRAST changes the appearance of the screen colours to optimise them for viewing. This may need adjustment based on the colours chosen.

A further short push of both switches will highlight CONTRAST. While this is highlighted:-

- short pushes on the right switch + make the screen darker
- short pushes on the left switch - make the screen brighter.

A further short push of both switches will highlight “Default” . While this is highlighted a short push of either switch will return all colours and the contrast level back to the factory settings.

Mode

Your VRX comes with G10 mode enabled. This is standard 2008 software with all the features and options referred to in this manual.

A push of either the right-hand + or left-hand – switch when mode is highlighted will change your VRX's mode to either G3 or X10 mode.

G3 mode is the same as G10 mode except you can only preset 3 gases in the gas list.

X10 mode causes the VRX to revert to old 2007 software, primarily for users who prefer the previous configuration

Prog - DO NOT ENTER THIS FEATURE unless programming via the website. If you access this accidentally, you will see this screen

```
REPROGRAM MODE
IF THIS IS DONE
INCORRECTLY, THE
COMPUTER WILL
STOP WORKING.
REPROGRAM?
SCREEN GOES OFF
NO <YES> <☰> NO
```

enter NO with a long push of the left switch. If the unit freezes in this screen simply remove the battery for ten minutes to reset it.

VPM – if you have purchased the optional V1 alternative VPM algorithm, a short push of either the right-hand + or left-hand – switch when VPM is highlighted will toggle between VPM ON and VPM OFF.

When VPM OFF is selected decompression will be calculated using our standard modified Buhlmann ZHL 16 algorithm with 2 minute deep stops.

When VPM ON is selected your VRX will calculate decompression using a VPM - based algorithm developed by us.

Usage - this figure tells you the total dive hours carried out on your VR computer to date.

NO STOP



In this screen you can see No Stop Times (NST) for depths to 41m, taking into account your previous dives and surface interval. The surface interval and target depth are user changeable. Note that the surface interval figure that you set is in addition to time already spent out of the water. You may be surprised that the No Stop times appear to be short. They do in fact correspond to standard Buhlmann dive tables which incorporate safety stops. For instance: VRX 18m dive No Stop Time = 39 mins VRX 18m with 3 min stop at 4.5m = 54 mins This means that if you were to do a dive to 18m on air with 54 minutes bottom time, you would see a required 3 minute stop at 4.5m on your look ahead schedule as you began your ascent. (Times are on air and assume no residual nitrogen to take into account).

FLY TIME

The FLYTIME screen shows the time that must elapse before you may fly in a pressurised aircraft and the length of time before your tissues will be totally desaturated.



SELECT and ADJUST gases

VRX Dive Computer Operations Manual 2008 rev 1

From the Home screen, the SIMULATE screen AND the Dive screen, you can access the gas SELECT and ADJUST features with a long push of the left -hand switch.



In the gas SELECT screen, short pushes on the left -hand switch take you through the ON gases. Up to 10 gases are available for selection. Simply keep pressing until the gas you wish to breathe at the start of the dive is displayed. Once you are confident that the correct gas is indicated, a push of the right switch will confirm. Your selected gas will now be displayed in the centre of the Home screen (or the DIVE screen if you are diving). Only turn ON the gases you intend to breathe on the dive. In closed circuit mode, only turn on the gas to be used in closed circuit. Bailout gases should be in the list but turned OFF until needed.

While diving, the current depth is displayed at the top of the gas select screen.

If you wish to change the gas displayed in the SELECT screen or any of its parameters, or you want to programme a new gas, a short push of both switches brings up the ADJUST screen.



ADJUST screen MOD highlighted



ADJUST screen Nitrox O2% highlighted



ADJUST screen Trimix O2% highlighted

Several options are now available.


With a short push of both switches, a new field will be highlighted and can be adjusted using by a short push of either switch + or -.

The fields available are:

- A) The gas number (0 to 9) Ten gases can be set in the gas list.
- B) ON (active) or OFF (inactive). Set to ON the gases you will be carrying on the dive in question, set all other gases in the gas list to OFF. (Note: if you turn all gases OFF you will not be able to exit the ADJUST screen.)
- C) The oxygen and helium levels in the mix: -
 - Air is displayed as AIR. Gas 0 is AIR and cannot be changed.
 - Nitrox is displayed as NX followed by the oxygen fraction, (e.g. NX36)
 - Trimix is displayed as TX then the oxygen fraction followed by the helium fraction e.g. TX 18/35. The helium content setting can be reached by a short push of both switches after the oxygen content has been set, (as long as the Trimix activation PIN has been purchased and installed.)
- D) The MOD: As you change the MOD the PP (PO₂) will adjust accordingly.

Selecting closed circuit gases and PO2 Set point

If you have purchased and installed the PIN for the closed circuit upgrade, you will have a Closed Circuit option in your GAS SELECT screen. Press and hold both switches to activate this.

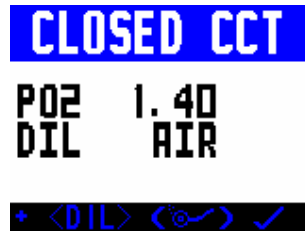

Entering this mode allows the selection of a closed circuit decompression algorithm and opens a CLOSED CCT screen. In this screen the gas mix you have selected is displayed as a diluent (DIL). Change the diluent as required by a short push of both switches then following the same procedure as outlined above for selecting and adjusting an open circuit gas.

A selectable PO2 setpoint is also shown in this screen. With successive short pushes of the left switch the PO2 will increment in steps of 0.05 bar. Once you have the desired PO2 a short push of the right switch will confirm and take you back to the Home screen (or Dive screen if you are diving). The PO2 and the diluent will be displayed there.

You can preset two different PO2 setpoints and switch between them during your dive. To do this, re-enter the CLOSED CCT screen, select another PO2 and exit again.

During your dive a long push on + in this screen will enable you to toggle between the two setpoints.

The VRX assumes that the PO2 selected is the PO2 that the rebreather will maintain as its setpoint during the dive and it will calculate decompression based on this and the diluent set. Your PO2 can change, especially on ascent and descent, and depending on the characteristics of the rebreather and its operator. You are strongly advised to be conservative with your PO2 selection. If you are diving and see a PO2 displayed which is higher than the selected setpoint, this is because you are at a depth where the diluent PO2 exceeds your setpoint. From the CLOSED CCT adjust screen, a long push of both switches will select open circuit mode, where, in the event of a bailout being required, you can select the gas you want to breathe in open circuit.

A Note on the MOD setting and Gas Switches

The MOD setting of an ON gas is important as this is the depth at which the VR will prompt you to switch to that gas. The look-ahead Time To Surface (TTS) and decompression profile will also assume a switch to deco gas at that depth. If you mistakenly set the MOD shallower than the preferred switch depth, you can still switch and tell the VR you have done so. Switching to a decompression gas too deep will trigger a PO2 warning. Incorrectly setting the MOD, or leaving gases ON which will not be used, means that the optimum look-ahead TTS and decompression profile will not be calculated or displayed. What you actually do during the ascent and any gas switches you make and tell the VR about will still be factored into the calculation but the on-screen prediction may not be the most efficient profile. The TTS includes ascent time and time at all decompression stops based on the diver switching to all the ON gases in his gas list at the MOD selected for each gas. If you plan to switch to a deco gas on ascent but subsequently do not in fact switch, the stop times shown will remain the same but the VR minutes will take longer to elapse in real time. If at any point during the dive you modify a gas content on the ON list, the decompression profile prediction will alter to take this into account. When you change to a different gas, in a few moments the VR will modify the decompression list and re-calculate all decompression. The decompression screen stays inactive for 20 seconds. Every time you push a switch whilst in this screen the 20 second timer starts again and the decompression calculations are temporarily frozen.

A Closed Circuit Dive Planning Example

A Trimix rebreather dive is planned with 18/35 as the diluent. The diver will use closed circuit Trimix throughout and then switch to open circuit surface-supplied oxygen at the 6m stop. In the event that an open circuit bailout is required the diver plans to carry an 18/35 cylinder and a Nitrox 36 cylinder. 18/35, Nitrox 36 and oxygen are selected as the three gases. The Nitrox 36 and oxygen remain OFF leaving Trimix 18/35 as the only ON gas. This will be seen as the DIL when the diver chooses the CLOSED CCT screen. In the CLOSED CCT screen the diver selects a PO2 of 0.7 for the start of the dive, then exits and re-enters the screen to select a second PO2 setpoint of 1.3 which can then be switched to at depth. If the diver were to leave Nitrox 36 and PO2 ON then they would be factored into the decompression prediction. Having said this, even if they were left ON accidentally the actual decompression would still be based on the gas selected as the DIL. In other words the prediction would be wrong but the actual decompression would be correct. If the required diluent is not displayed, in the PO2 select screen press <DIL> (short push, both switches) to get to the gas select screen. This is similar to the gas select screen for Open Circuit. Once there, by pressing you can scroll through the range of programmed diluents until the one required is found. Pressing confirms your selected diluent and returns you to the PO2 SELECT screen.

Note: Setting CCR Bailout gases is covered in detail in the Gaslist section.

Display Modes Screen

The Display Modes screen is a revolutionary unique feature which is new in 2008 VRXs. For the first time, a diver can choose which information he sees in his primary dive screen and customise it to his own preferences. The VRX is the only computer that allows a diver to do this.

It is accessible via the Mini-Screen Feature in the Home Screen.



This screen offers you the opportunity to decide which information appears in your primary dive screen. Check the options you require and leave unchecked the information you don't require. All checked options will be shown in the dive screen. (Note: you must choose your preferences; you cannot check everything as there is insufficient space in the screen!)

A short push of both switches moves the highlight from one setting to the next, a short push of either switch will check or uncheck as required.

An Explanation of the Options in the Display Modes Screen

Flip

Flip – turns the screen in 180 degrees.

An upward arrow positions the screen for use on a divers left arm,

A downward arrow configures the screen for use on a divers right arm.

Deco – gives you decompression information on the dive screen. If you do not require this uncheck the option.

MaxD – gives you a reading on the primary dive screen of the maximum depth reached on the dive so far

AvgD – gives you a reading on the primary dive screen of the average depth on the dive so far, (for on the fly decompression calculation by those who use this technique.)

nst – adds No Stop Time information to the primary dive screen


C (or F) – adds An Ambient Temperature reading to the primary dive screen

tts – adds Time To Surface information to the primary dive screen

cns – adds information on your current CNS loading to the primary dive screen

Ceiling Icon – gives you an accurate reading of your current ceiling depth. Use this along with the diver-on-the-line feature to ascend “following the curve”.

Log Screen

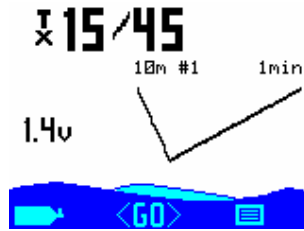

In the Home Screen, when the graph depth and time of your last dive are shown on the mini screen, a short push of both switches will take you to the Dive Log Feature .



The logbook screen shows depth, time and surface interval information as well as accumulated OTUs (oxygen tolerance units). If a decompression stop is missed or violated during a dive, the MISSED STOPS warning is displayed in the top right corner of the screen. If multiple stops have been missed, the number of stops missed is shown immediately after the word STOPS.


One dive at a time is displayed. With a short push of the right switch, the next dive in the sequence will appear. A long push jumps 10 dives. The logbook stores 100 on-screen dives.

If the PC download PIN and cable link have been purchased and installed, dives can be downloaded to a PC and can be displayed in much more detail.


Your VRX can store 22 hours of diving for downloading, stored at 10-second intervals. When the memory is full, it simply overwrites and starts again.

If long, detailed dives are logged, they should be downloaded as soon as possible to avoid losing them.

Graph

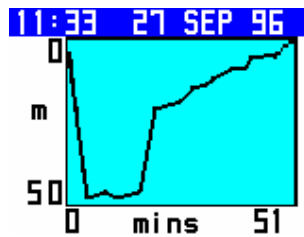

The VRX has a second log screen, accessible by a long push of both switches, in which a graphic profile of the dive is shown. While in the graphic profile screen, a short push of both switches will bring up a screen showing a graph of ambient temperature throughout the dive.

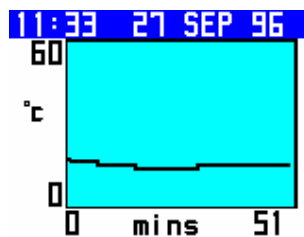

The word xfunc appears for five seconds before being replaced by mins (time). A short push of the right switch in any profile screen will bring up a log of the next dive, a short push of the left switch will take you back to the original log screen.

If you have an external oxygen sensor connected and activated, a further short push of both switches will bring up a graph of the external oxygen sensor reading throughout the dive. For the O₂ reading graph to reflect data correctly the Xfunc mode must be set to the external sensor option prior to the dive. If the external function is changed during the dive, the graphing mode may become confused and caution is advised in interpreting the graph data if this has occurred.

Markers

At any time during a dive when the main dive screen is displayed a long push of both switches will place a marker "x" at the top of the screen in the graphic log profile and the word MARK will appear in the upper right section of the dive screen.

Calendar

From the main Dive Log screen, a long push on the left switch takes you into calendar mode.



A short push on + or - moves the marker back and forward one day. A long push moves 30 days. Days with dives are highlighted.

A short push of both switches takes you to the activity screen.




In the activity screen, a short push of both switches moves you between fields. A short push of the right switch sets the activity in the calendar, (e.g. F=FLY DAY).

To set an alarm highlight ALARM OFF, then set the time using + and -. Use < > to move from hours to minutes. When the time on that date is reached, the unit will automatically turn on. When you are reading a calendar day on which a dive has taken place, Log Book will be displayed in the Activity Screen.


When Log Book appears in the screen and is highlighted, a short push of the right switch will take you back to the logbook.

Warnings


The VRX displays warnings in the form of on-screen messages in the top right section of the dive screen and the backlight flashing. On multicolour VRXs the right hand side of the screen goes red.

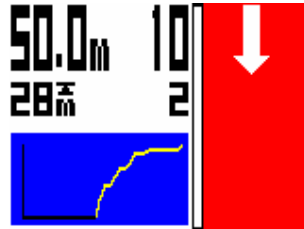


A Downward Arrow means “Descend, you have violated a decompression ceiling”

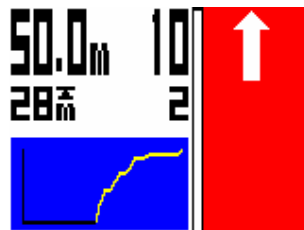

An Upward Arrow means “Ascend, your PO₂ is at a dangerously high level and you have no alternative active gas to switch to.”

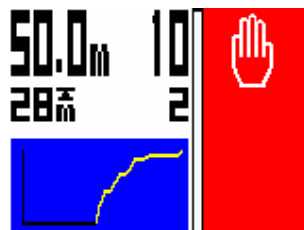


The Hand Icon means “Slow down, your ascent rate is greater than 10m/min.”

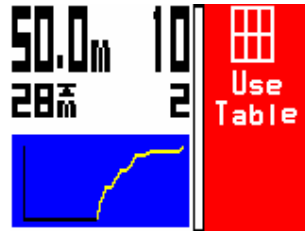

“USE Table” means “Decompression has been violated on current dive, or previous dive within the previous 24 hours.”

“Missed stops” is shown on reaching the surface after a dive where a decompression stop has not been completed. •

“Violated stops” is shown on reaching the surface after a dive where a decompression ceiling has been breached for longer than 1 minute, but all required estimated stops have subsequently been carried out as advised by the VR in USE TABLES mode. •

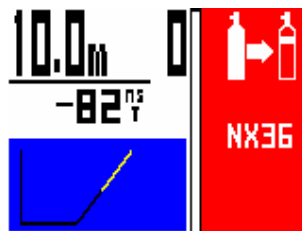

The two bottles with arrow icon means “Gas Switch warning. Switch to another gas in the gas list you have set.”

The single bottle icon with AIR to the left is the Air Break warning. Repeats for 5 mins every 30 minutes while CNS % is above the limit you have chosen in the SETUP screen.

Rebreather related warnings

XP Fail means PO₂ sensor reading at 0 - your external sensor is not showing any reading. The cell has failed or is not connected.


X Check means your FO₂ is dangerously low i.e. the PO₂ is low compared to the diluent at depth, for instance air diluent at 10m should read a minimum of 0.42 and no less.

Check FO₂ means FO₂, depth and gas type do not match up. For instance if you are at the surface and have air in the counterlung and the FO₂ is less than 21%. This would indicate a possible calibration error.

Decompression Stop Violation

If you ascend past a decompression stop to a level where the tissues may become over-pressurised, then the down arrow message appears and a 60 second timer display starts to count down. If the warning is ignored, after 60 seconds a message will appear which says USE TABLE. Once this message appears the VR will continue to display 'best guess' decompression data. This means that the decompression displayed may be in error because of the missed stop and that you should consult back up tables and add additional safety stops as required. But your VR will continue to track. If you temporarily break a decompression ceiling and get back to the correct depth within 60 seconds the timer will start to count up again. When it reaches 60 the decompression calculations will restart. Depending on the extent of your excursion you should build in extra safety for the remainder of the dive. MISSED STOPS warnings will be stored on the logbook and the warning will be displayed for 24 hours on the home screen. The VR will not lock you out. If you re-enter the water, best-guess decompression will still be shown but should not be relied upon.

Gas Switch

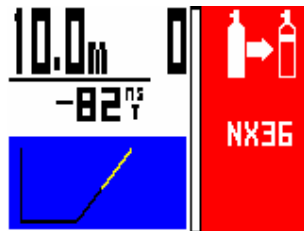

During a dive, while ascending or descending you may notice a SWITCH message in the top right hand corner of the screen and a prompt for a gas other than that which you are breathing. This is the VR asking whether you wish to switch gases based on the plan you have entered and/or the gases you have switched on. The SWITCH message comes on when the MOD you entered for that gas has been reached. You may ignore this if you wish and carry on using the same gas.

Air Break

This warning will be displayed when the user set CNS warning limit is exceeded. This will continue to be displayed for five minutes every thirty minutes thereafter.

Rebreather & Analyser Links

The VR can be fitted with a remote oxygen cell to permit

- a) surface use as an oxygen analyser
- b) underwater use with a semi-closed rebreather
- c) surface and underwater use with a closed circuit rebreather.

An accessory cable and dedicated PIN are required.

The accessory cable connects to the seven pin I/O connector on the left hand side of the VRX. Remove the plastic cap to gain access to the connector

Once you have installed the dedicated PIN to activate the VR's I/O connector, in the Dive Options (DVo) screen you will find you are now able to move the highlight to the XFunc and XDec features via successive short pushes of both switches.

To use the VR with an analyser or to calibrate a rebreather link, with the highlight under XFunc use short pushes of either switch to bring up XO2.

You will then be able to bring up the O2 SENSOR mini screen on your VRX's Home Screen

When you have a cable connected from your VRX to an oxygen cell in a rebreather, ensure that XDec in the Dive Options screen is set to ON so that your VRX will calculate decompression based on the reading from the external cell.

How to use your Open Circuit VRX as an Oxygen Analyser using the C8b Oxygen Analyser Kit

Connect the sensor cable to the VRX's I/O port.

Ensure the R17 oxygen sensor cell is installed on the end of the cable.

You can calibrate the analyzer either in ambient air or by inserting the cell in a “Quick Ox” cylinder connection kit and attaching the connection kit to an air cylinder.


When using the “Quick Ox” connection kit attach it to an air cylinder and increase the flow gradually until the sensor reading changes, then decrease the flow until the reading comes back down and becomes stable.

That is the correct flow rate to use in future.

Switch on your VRX


Analyser calibration is normally carried out in air and on Open Circuit VRXs air is automatically set as the only CAL gas.

In the Home Screen on your VRX scroll through the mini screens until you reach the SENSOR screen, where you will see the current oxygen percentage, the most recent oxygen fraction saved and a PO2 bar graph. A short push of both switches will GO TO this screen.

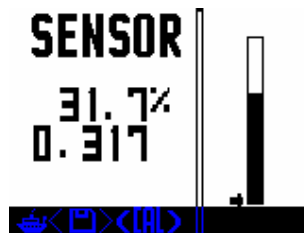

The PO2 bar graph has no digits but the bottom of the bar is zero and the top 2.0. The small arrow to the left of the bar represents the VRX's internal PO2 set point.

A long push on both switches then takes you into CAL (calibration) mode.

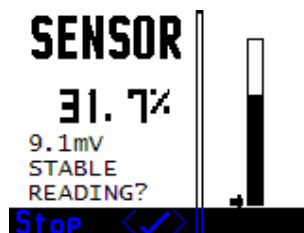

If you are using an Open Circuit VRX you will see a reading and a measurement of the oxygen sensor cell output (in millivolts mV).

VR Technology Limited

When the reading on this screen is stable, a short push of both switches will calibrate the sensor (at .209 if using AIR as the CAL gas).

Your VRX is now calibrated.

A short push of both switches will save the reading.

A short push on the left switch will return you to the Home Screen.

Note: When saving you may be shown a WARNING CELL LOW or a WARNING CELL HIGH message. This refers to the mV output of your Oxygen Sensor Cell and may indicate that you have the wrong type of cell connected, that your cell needs replacing or the wrong CAL gas has been selected.

Special Calibration Procedures for Closed Circuit VRXs



Make sure you are in Closed Circuit Mode and you see CLOSED CCT at the top of your screen if not, go to Closed Circuit mode by a long push on both switches.

A short push of both switches takes you into the SELECT screen



a further short push of both switches takes you to ADJUST



Move the cursor to select your chosen calibration gas, either Air in your gas list and switch it ON

A long push of both switches will save NX 99 as your diluent

o Save it as calibration gas (CAL) by a long push on both switches o CAL GAS will appear on the screen o Then a short push on the right -hand switch will confirm and a further short push on the right-hand switch will take you back to the Dive Now screen o Using the right switch toggle to O2 & make a long push to see the SENSOR Screen where a long push on both switches takes you to CAL (calibration) mode

You will see the instruction FLUSH CAL GAS (ignore this if you are calibrating in ambient air and do a short push on the right switch).

If calibrating using the cylinder connection kit, open the cylinder valve until you hear a gentle hiss, (see caveat concerning flow rate, above).

Once the reading is stable a short push on the right switch accepts it and takes you into the EQUALISE screen (which, again, if calibrating in ambient air you ignore).

If using the cylinder connection kit, stop the flow of gas from the cylinder and allow the reading to stabilize

Once the reading is again stable a short push on the right switch accepts it.

You will then be back in the SENSOR screen where you will see a reading and a measurement of the oxygen sensor cell output (measure in millivolts mV).

When the reading is stable a short push of both switches saves the calibration in the centre of the screen.

Your VR is now calibrated.

A short push on the left switch returns you to the Home Screen.

Analysing a Gas

Connect the sensor cable with oxygen sensor cell attached to the VR's I/O port, place the cell in the cylinder connection kit and attach the connection kit to the cylinder to be analysed.

Switch on your VRX.

In the Home Screen on your VRX scroll through the mini screens until you reach the SENSOR screen

There you will see the current oxygen percentage, the most recent oxygen percentage saved and a PO2 bar graph.

Open the cylinder valve until you hear a gentle hiss. The O2 reading will start to move.

When the reading is stable, a further short push of both switches saves the analysis, you will see a saved icon next to the saved analysis and the GAS icon will appear in the bottom right-hand corner of the screen.

A short push on the right-hand switch will take you into the Gas Adjust screen.

The gas number will be highlighted and you can change that number to place your analysed gas into any position in the gas list you wish.

Short pushes of both switches will move the cursor on the screen until the analysis (2nd line up) is highlighted.

You will then see a TRANSFER O2 icon in the bottom right hand corner of the screen.

A short push of the right-hand switch will transfer your analysed gas to the designated position in the gas list.

Then a long push of both switches saves it. You will need to make the gas active to use it. If the analysed gas is the same as the gas already occupying the designated position in the gas list then the transfer icon and Save O2 icon will not appear. (There is no need to transfer what is already there!) For oxygen analysis at altitude, simply set the analyser to 20.8 to 21% in air.

Semi Closed Rebreather cable link

In Open Circuit mode with the I/O connector activated and the cable linked to an external oxygen cell located within a semi-closed circuit rebreather, your VRX will read semi-closed circuit decompression.


Calibration: calibrate as per the analyser instructions.

Operation: If you have purchased and installed the PIN to activate the VRX's I/O connector, in the Dive Options screen (accessible by scrolling through the Mini screens in the Home Screen) you will be able to move the highlight to the XFunc and XDec features via successive short pushes of both switches.

To activate the VRX for use with a rebreather link cable, with the highlight under XFunc use short pushes of either switch to bring up XO2.

Then, with the highlight under XDec use a short push of either switch to bring up ON.

An Open Circuit VR computer with XDec set to ON will give you semi -closed circuit decompression based on the external cell readings.

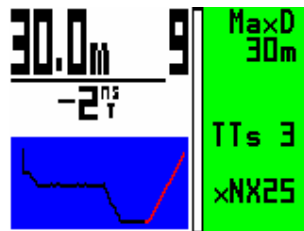

In this mode, the current fraction of oxygen in the mix as read by the cell, preceded by X (e.g. XNx30 for Nitrox 30) the Home Screen and the Dive Screen will display. Also displayed will be the adjusted mix Please note that although actual decompression will be based on the external FO2 reading, the look ahead time to surface (TTS) calculation will be based on the ON gas selected in your gas list. So that the prediction will be as close as possible to actual decompression the ON gas should be set as your anticipated FiO2, calculated using the semi -closed equation.

Semi Closed Rebreather Warnings

An XFAIL warning will appear if the PO2 sensed by the external cell falls below 0.16 bar.

An XCHECK warning will show if the PO2 of the external call is sensing less that the PO2 of the diluent selected at the depth.

Example. If you have air set as a diluent (or semi -closed gas) and you are at 10 metres and the external cell is reading less than 0.42 PO2 (air PO2 at 10m), then the warning will show.

This is a possible indication that a flow orifice has failed or PO2 injection has ceased.

Using a Closed Circuit Rebreather cable link

Calibration

Connect the sensor cable to the VRX's I/O port

Ensure the correct oxygen sensor cell is installed in the sensor holder

Install the sensor cell in your rebreather

Switch on your VRX

A long push on the left switch will take you into Gas Select screen

Make sure you are in Closed Circuit Mode and you see CLOSED CCT at the top of your screen

If not, go to Closed Circuit mode by a long push on both switches

A short push of both switches takes you into the ADJUST screen

Move the cursor to select NX 99 in your gas list and switch it ON

A long push of both switches will save NX 99 as your diluent

Save it as the calibration gas (CAL) by a further long push on both switches


CAL GAS will appear on the screen

Then a short push on the right-hand switch will confirm and a further short push on the right-hand switch will take you back to the Home Screen.


Remember, AFTER calibrating, to set the diluent setting back to the actual dive diluent!

Then in the Home Screen, scroll through the Mini Screens to the SENSOR screen and GO TO the screen with a short push of both switches.

There you will see the current oxygen percentage, the PO₂ in bar (adjusted automatically for ambient atmospheric pressure), and a PO₂ bar graph.

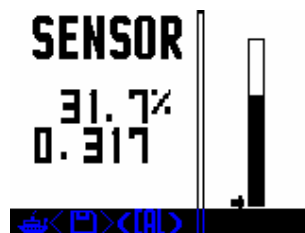


A long push on both switches takes you into CAL (calibration) mode

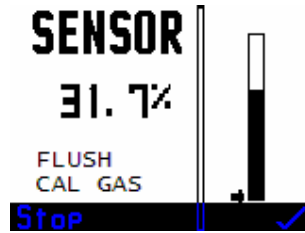


You will see the instruction FLUSH CAL GAS

Completely flood the rebreather loop with oxygen, (usually achieved by flushing and emptying the loop with pure oxygen three times), then equalize the counterlung to ambient pressure)

A short push on the right switch takes you into the EQUALISE screen

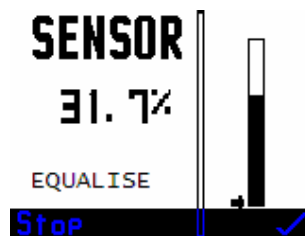

Once the reading is again stable a short push on the right switch accepts it and takes you into a SENSOR screen where you will see the reading and a measurement of the oxygen sensor cell output (measured in millivolts mV)

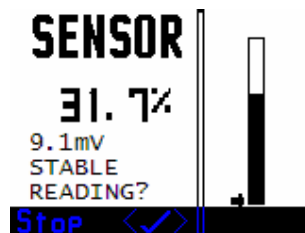

When the reading on this screen is stable, a short push of both switches will calibrate the sensor (at .99 if using Oxygen as the CAL gas).

Your VRX is now calibrated.

A short push of both switches will save the reading.

A short push on the left switch will return you to the Home Screen.

If you have difficulty with this process, it is possible that the rebreather has not been properly calibrated. To test this, follow the manufacturer's recommended calibration procedure. For example: If the rebreather has an auto-cal system you may need to set the rebreather's atmospheric pressure, especially at altitude.

Fill the rebreather completely with oxygen with the loop closed.

Then evacuate the loop, allowing no air in at any time.

Repeat this three times.

After the last fill make sure the loop is at ambient pressure by momentarily opening and closing the mouth piece or pulling the counter-lung dump cord.

Read the rebreather displays.

If they are at 1.0 Bar PO₂, the rebreather is correctly calibrated.

If not, repeat the calibration process. You may get a cell stuck message while calibrating with the counterlungs full of oxygen. If so, you may need to add a breath of air to the loop to allow auto calibration to take place.

Fill and evacuate the rebreather one more time with oxygen and the displays should read 1.0 Bar.

Now try calibrating the VRX again.


Closed Circuit Diving Operation

If you have purchased and installed the PIN to activate the VR's I/O connector, in the Dive Options screen you will be able to move the highlight to the XFunc and XDec features via successive short pushes of both switches.

To activate the VRX for use with a rebreather link cable, with the highlight under XFunc use short pushes of either switch to bring up XO2.


Then, with the highlight under XDec use a short push of either switch to bring up ON.

On the Dive Screen with XDec OFF the display shows SP followed by the VRX's internal set-point on the second line up. The diluent gas is displayed on the bottom line.

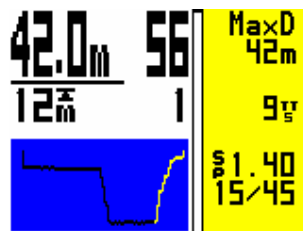

Note: if the partial pressure of oxygen in the diluent at the prevailing dive depth exceeds the VR's internal set point, then the diluent PO2 will be displayed instead of the set-point.

On the Dive Screen with XDec ON the display shows X followed by the actual reading from the external O2 cell on the second line up. The diluent gas is displayed on the bottom line.

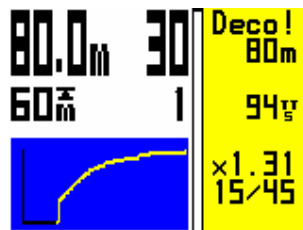

If an error occurs with the cell or cable XP FAIL will show on the bottom line.

If XFAIL appears, go back into the Dive Options screen via the second dive screen and switch XDec to OFF. The VRX will then begin calculating decompression based on the internal setpoint.

Practice such emergency procedures using the VRX in simulate mode.

VRX Calibration with a CCR at Altitude

Because the rebreather works on absolute pressure the calibration gas in the VRX must be adjusted to allow for altitude pressure.

Example: If you are at an altitude pressure of 850mb go to the GAS menu and adjust one of the gases for the following: Actual calibration gas % X Current atmospheric pressure at altitude 1000mb Therefore if 99% is used for a calibration gas at 850mb altitude: $99 \times 850 = 84\%$

So instead of setting 99% as the calibration gas, set it to 84% and then do a flush routine as described earlier. This involves evacuating the breathing loop without adding any air, then flooding the unit with oxygen and evacuating again. Repeat this three times. Now with the loop full of oxygen equalise the pressure in the loop with the outside pressure. Now calibrate the unit.

The calibration screen also shows a PO2 bar graph

IMPORTANT. After calibrating always remember to set the diluent back to the actual dive gas.

Oxygen Sensors

Galvanic oxygen sensors and their connection systems are affected by many environmental conditions and this must be taken into account when using an oxygen analyser or rebreather.

These conditions include:

1. Temperature
2. Moisture
3. Electrical noise (proximity of power sources and RF interference)
4. Connector corrosion
5. Flow rate (hence partial pressure)

Therefore, it is not unusual to notice small 'drifts' while calibrating or using the units. While an ideal calibration in air should read between 20.8% and 21% oxygen, it is not unusual to see momentary shifts due to the above. Many oxygen cells, if unused for a period, appear to benefit from a flow of an oxygen enriched gas prior to calibration and use.

To use the VRX as an Oxygen Analyser purchase the Delta P 'Quick -ox' cylinder connection kit and I/O cable package, (our product code for the package is C8b).

The standard Teledyne cell recommended for use with the VR analyser cable is the R17 with a 3.5 mini jack connection system.

Care must be taken to ensure that the cable end connector is correctly inserted all the way into the cell and does not disconnect during use. Occasionally corrosion may occur on both the cable end and cell connector and it may be necessary to rotate the connector in the cell to clean off any build-up. The symptoms of the presence of corrosion can be an incorrect (unstable) reading after calibration or seen as a moving FO₂ as the connector is rotated.

The R17 is also the cell used with our C8 Inspiration rebreather cable package.

The cell used with the C8a Drager rebreather cable package is the R22 with a molex connector.

Warranty And Support

Warranty

This product carries a one year guarantee from date of purchase for bonafide manufacturing faults. This does not cover damage to the case or screen and switches during operation.

Keep your proof of purchase to submit in the event of warranty repair.

Faulty VRX's will be repaired or replaced as appropriate.

Service

All digital depth monitoring devices need a calibration check from time to time. Due to the potential depth of operation of VR computers it is recommended that you return yours to the factory for this check periodically, (a service after every 100 hours of diving is recommended.)

User Feedback

We welcome any feed back from our customers. Please feel free to email or fax us with any requests or suggestions. Registered users will be kept informed of upgrades.

Suggestions

For technical support visit our website on www.VRX.co.uk or email us at: support@VRx.co.uk

Planned Upgrades

If you have any comments on functions you would like to see included on the computer, please do not hesitate to let us know. Please see our website www.VRX.co.uk for announcements regarding new features and options.

Maintenance Tips

The bulkhead I/O connector port

The bulkhead I/O connector port is watertight and any water that gets in to the port cannot harm your VR. However, should sea water get inside the port or the ends of your cable link, flush them with fresh water as soon as possible afterwards then leave them to dry completely BEFORE refitting the cap. If the reading from a 4th cell cable becomes erratic, a solution may be to put a SMALL amount of grease on the metal end of the cable end that slides into the bulkhead I/O connector to lubricate the inner O ring of the bulkhead connector. This will serve to improve the seal and make the connection more reliable. If corrosion appears on the contacts rinse in a solution of white vinegar and use a fine toothbrush to remove the build-up. Rinse and dry before replacing the cap. Remember, the cleanliness of the contacts is essential to the integrity of the link. Look after your cable and it will look after you.

Battery Cap Maintenance

Clean and re-grease the O-rings and O-ring grooves every 10 dives.

Power Supply

If you get a power supply problem, check the battery compartment, spring and cap for any build up of corrosion. If corrosion is present, pull the spring out of the cap, soak the spring and cap in a solution of white vinegar, remove any residual build up with a fine toothbrush, rinse in fresh water and dry.

Switch Maintenance

If the switch sticks, rotate it first in its groove to loosen it up. If that does not work, hold the switch in and, with a small flat head screwdriver, carefully ease out the silver circlips holding it in from the small groove on the back of the VRX. The spring and switch will then come out easily. Soak switch and spring in white vinegar, rinse with fresh water and dry off. Flush the switch groove with fresh water, spray A LITTLE light engineering oil (WD 40 or similar) inside the hole.

Put the spring and switch back in, push it in and out a few times and it should now move freely. If so, replace the circlips while holding the switch completely in. Push the circlips down firmly.

Troubleshooting

VRX will not turn on.

If the VRX appears to “lock” in a screen when changing the battery, simply leave it for three minutes (with the battery in) and it will reset. If the battery coating is too thick and fits too tightly in the cap, this may lead to power supply problems during the dive and the computer will shut off. Replace the battery with one that moves freely within the cap even when the spring is compressed.

If the computer does not fire up when a new battery is installed, unscrew the cap then screw it in again slowly until the screen flashes on. Stop screwing in the cap at this point and allow the unit to turn on and go into the start up screen. After a short time it will turn off (meaning the backup battery is now charged). Continue screwing in the cap fully.

If the VRX does not turn on, check to see if the pinhole on the rear may be blocked or covered. The Pressure transducer lies below this pinhole. In order for the computer to function, this pinhole must not be covered or blocked in any way. If it does get blocked, remove debris carefully but NEVER insert a sharp object or direct a jet of water into the pinhole for fear of damaging the pressure transducer irrevocably.

If you cannot get past the initial Start Up screen when turning the VRX on, remove and check both the switches to see if one or both may be broken and needs replacement. Call your dealer for a replacement set. If the external switches are fine, the problem may be a broken internal reed switch, in which case the computer will need to come back to us.


Specifications

Depth limit 150m (calibrated)
Time limit 9999 mins and 59 seconds
Max deco stop 99 levels
Number of gases 10
Battery life Up to 100 hours
Sleep Approx. 1 year
Dive memory Approx. 80 hours
Record resolution 10 seconds
Logbook dives 99
Dive time stops when a pressure equating to 1.5m is reached
Operating temperature: 0°C to 40°C
Depth accuracy: ± 0.1 m Max

Register your ownership and sign up to receive updates and newsletters on our website www.VRx.co.uk

How to read the Dive Screen.

Open Circuit Diver – No Decompression Screen

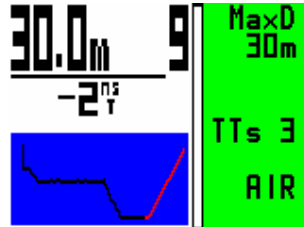

This dive screen shows

The diver has no decompression burden – hence the green colour on the right of the screen.

The diver is at 30m and is 9 mins into his dive.

The maximum depth he has reached on the dive is 30m

He can spend a further two minutes at this depth before he goes into deco. In other words his no stop time (NST) is two minutes.


He is using air and diving on open circuit.

It will take him three minutes to reach the surface at a rate of 10m per minute. In other words his Time To Surface (TTS) is 3 minutes.

The dark colour on the graph shows the track of the dive so far. The light colour shows a profile of the ascent the diver should make if he ascends now.

Note that in the Display Modes Screen the diver has ticked Deco, MaxD, nst and tts.

Closed Circuit Diver – No Decompression Screen

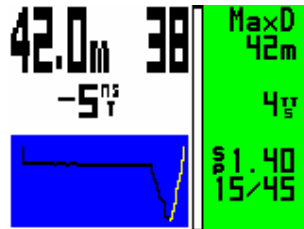

This dive screen shows

The diver has no decompression burden – hence the green colour on the right of the screen.

The diver is at 42m and is 38 mins into his dive.

The maximum depth he has reached on the dive is 42m

He can spend a further five minutes at this depth before he goes into deco. In other words his no stop time (NST) is five minutes.

He is using trimix 15/45 and diving on closed circuit.


The internal PO₂ setpoint is 1.40.

It will take him four minutes to reach the surface at a rate of 10m per minute. In other words his Time To Surface (TTS) is 4 minutes.

The dark colour on the graph shows the track of the dive so far. The light colour shows a profile of the ascent the diver should make if he ascends now.

Note that in the Display Modes Screen the diver has ticked Deco, MaxD, nst and tts.

Open Circuit Diver – Decompression Screen

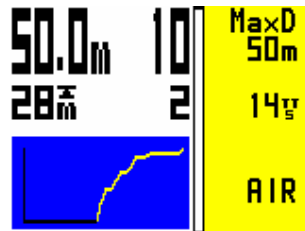

This dive screen shows

The diver has a decompression burden – hence the yellow colour on the right of the screen.

The diver is at 50m and is 10 mins into his dive.

The maximum depth he has reached on the dive is 50m

His first decompression stop is 2 minutes at 28m.

He is using Air and is diving on open circuit.


It will take him fourteen minutes to reach the surface at an ascent rate of 10m per minute and including required decompression stops. In other words his Time To Surface (TTS) is 14 minutes.

The dark colour on the graph shows the track of the dive so far. The light colour shows a profile of the ascent the diver should make if he ascends now.

Note that in the Display Modes Screen the diver has ticked Deco, MaxD and tts.

Note too that when in deco the top line of the right side of the screen will alternate between “MaxD” and “deco!”

Closed Circuit Diver – Decompression Screen

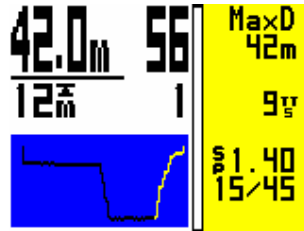

This dive screen shows

The diver has a decompression burden – hence the yellow colour on the right of the screen.

The diver is at 42m and is 56 minutes into his dive.

The maximum depth he has reached on the dive is 42m

His first decompression stop is 1 minute at 12m.

He is using Trimix 15/45 and is diving on closed circuit.

The computer is planning decompression based on the internal setpoint.

The internal PO₂ setpoint is 1.40.

An external link to the rebreather is not connected or has not been activated.


It will take him nine minutes to reach the surface at an ascent rate of 10m per minute and including required decompression stops. In other words his Time To Surface (TTS) is 9 minutes.

The dark colour on the graph shows the track of the dive so far. The light colour shows a profile of the ascent the diver should make if he ascends now.


Note that in the Display Modes Screen the diver has ticked Deco, MaxD and tts.

Note too that when in deco the top line of the right side of the screen will alternate between “MaxD” and “deco!”

More Closed Circuit Dive screens

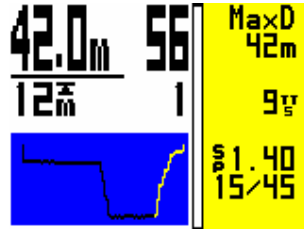


In closed circuit mode with the external sensor XO2 set to OFF the PO2 setpoint is displayed on the second line up in the right hand section of the screen.

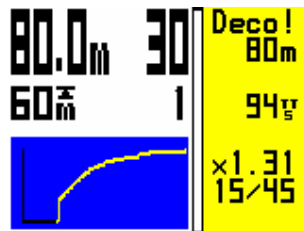


In closed circuit mode with an external cell connected and XO2 set to ON the actual PO2 is shown on the second line up.

How to Switch Gases during a Dive.

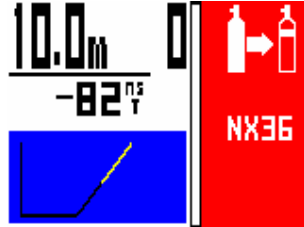

The Gas Switch advisory will appear in the top right hand corner of the dive screen on ascent as you reach the MOD you have set for your decompression gas. It will also appear on descent to ask if you wish to use your deco gas as a travel gas and, if you are using a travel gas, it will appear again when you exceed the MOD of that gas to remind you to switch to bottom mix. If you are going to switch gases, first actually do the switch and then as soon as you have begun breathing from the new gas, tell the VR that you have done so first by a long push on the left switch when the gas bottle is showing in the bottom left hand corner of the screen.

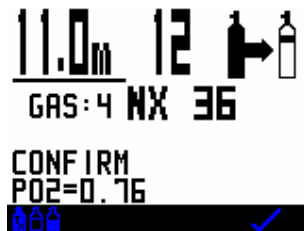

This will take you into a screen where you will see the gas switch symbol and the new gas you have just switched to. A short push on the right switch will then take you back into the dive screen where the new gas will be displayed and decompression will begin to be calculated based on this gas.

Remember, your decompression look-ahead (TTS) is based on you switching to all ON decompression gases immediately upon reaching the MOD set. If you do not switch gas, or delay switching, your decompression time will be extended. This will not be reflected in the number of minutes on the look ahead. These will stay the same. The minutes will just take longer to elapse.

Changing or Adding a New Gas During a Dive

One of the unique advantages of the VRX is that, during a dive while underwater you can add a new gas to your list of ON gases or amend the gas content of a current gas.

You can practice doing this on the surface in the Simulate screen.


A long push of the left hand switch in the dive screen will take you into a screen showing the current gas and PO2



In this screen a long push of the left switch will take you into the Gas SELECT and ADJUST screens and add a gas, change the parameters of a gas or switch a gas on or off just as you could on the surface.

Going from the Main Dive Screen to Other Dive Screens

A long push of the right switch in the main dive screen will take you into further dive screens showing your dive summary information

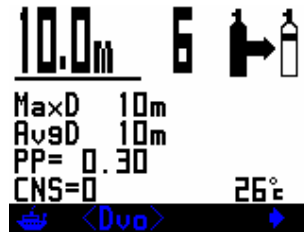

A short push of both switches in this screen takes you into the Dive Options screen.

Then a short push of the right switch takes you to a list of required decompression stops if you are in decompression.



In these screens a further short pushes of the right switch move you to the next page of stops until the final stop is shown.



A long push on the left switch at any time will return you to the first dive screen.


VRX additional features

Display modes

In display modes there are two additional features:


Automatic display flip

The A option for the Flip mode causes the screen to be automatically flipped over if the VR is turned upside down. This means the display will auto rotate to show the information the right way up, even if you have turned the VR upside down.

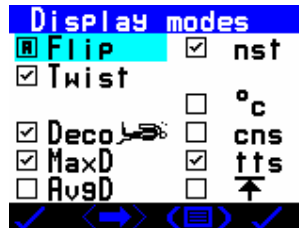

Twist mode for mini screen jumping

Setting Twist mode on allows the user to skip through the mini screens in the main dry screen by twisting the VR to the right 90degrees or to the left 90degrees. The unit has to be held for half a second or so to trigger the mini screen change. A twist to the right will be equivalent to a short right button push, so the mini screen will change to the next one as though a short press of the right button had been performed. A twist to the left is equivalent to a short left button push and will change the mini screen accordingly.

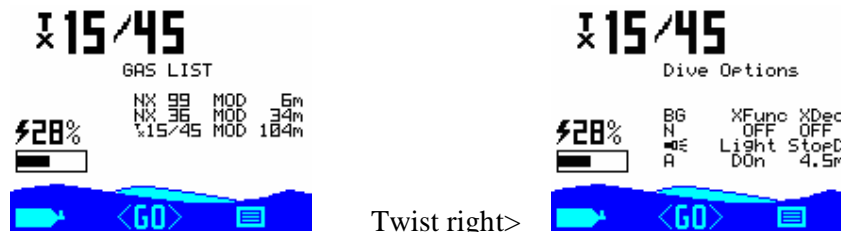


A twist down (version 1.1) will navigate to the mini screen currently displayed.

Torch



The VRX is fitted with an LED torch. The control for this is found in the Dive options screen. There are three settings:

- N = torch always off
- Y = torch is always on when the VR is on
- A = torch turns on when the VR is on and turned face down. The torch stays on for 10seconds after the VR is returned to a non -face down position.

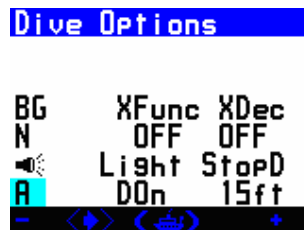

Note: The torch is intended as a last resort backup when diving, and should not be considered as an alternative to a good dive torch.

Colours

The VRx is available in a range of colour options as well as standard grey:

- Chrome plated
- Red anodised
- Gold anodised
- Blue anodised

Battery

The VRX is fitted with a rechargeable Lithium -ion battery. A multi-voltage charger is supplied, that will recharge a completely flat battery in approximately 3 hours.

The battery level is shown in percentage on the main front dry screen. A full battery will give the approximate performance:

- Total sleep time without use = 6 months
- On time with backlight on = 10 hours
- On time with backlight off = 20 hours
- On time with torch and backlight on = 8 hours

The battery comes with a 4 year warranty. The lithium battery can also be serviced and replaced at the factory. Do not take the VR apart or change the battery yourself. Warranty is void if the VR has been opened or tampered with.

Power Monkey charging option


We are pleased to announce our association with Power Traveller who make a superb range of mobile charging products. With our special adaptor, you can charge your VRx with their Power Monkey shown here. The Power Monkey will also charge your mobile phone and most MP3 and MP4 products. The Power Monkey itself can be charged from its own world wide mains supply, or its Solar Cell or a computer USB port. Please visit the Power Monkey web site for full details. The VRx adaptor is only available when buying the Power Monkey option from VR Technology Ltd - Part# 2014.

VRX Dive Computer and Variable Gradient Model VGM Decompression Algorithm

Release version features 8th October 2008

Following the huge success of the VR3 dive computer VR Technology will be launching the VRX dive computer at DEMA this month.

The Variable Gradient Model (VGM) algorithm is available from October 08 exclusively in the new VRx dive computer. Free download software to complement the product is also available at www.technologyindepth.com/vrx.html

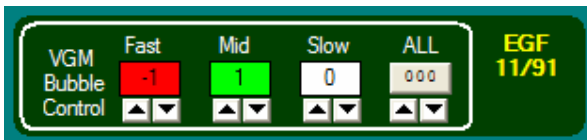

VGM - Decompression philosophy

The VGM algorithm is built on recent practical dive planning and diving techniques as well as the scientific and theoretical understanding over the past 100 years. It combines better theoretical knowledge of bubble physics together with known diving practices that help decompression and well being after and during decompression diving.

VGM also gives the user the ability to change the conservatism to increase or decrease decompression times. Some technical divers find they feel good after a decompression with less in water time than others.


The Equivalent Gradient Factor for the VGM setting is displayed for comparison with other dive planning software and computers.

The default settings have been implemented based on feedback and dive records from many experienced divers, and it is the input of real technical divers in the choice of these settings that has made VR Technology and its team at the forefront of technical diving product design for over 20 years.

Decompression is a physiologically complicated event. There are many factors that affect how well the human body decompresses and how well it is able to withstand pressure exposures. All dive algorithms have been devised to combine the complexity and risk of staying in the water with the risk of decompression sickness after surfacing. Things like hydration before a dive, rest and even oxygen after a dive all help reduce the risk of DCS. So bear in mind that as with all decompression planning there needs to be a balance and understanding of the risk of reducing decompression times and the impact of DCS. Please refer to your training agencies' information and advice on these issues.

WARNING!

Even if your dive computer or PC generated software allows for less conservatism and a reduction in decompression times this should not be arbitrarily undertaken without first researching data available from other divers/agencies, conducting controlled trials and understanding that you may be undertaking a level of experimentation in order to adjust the algorithm for your specific needs.

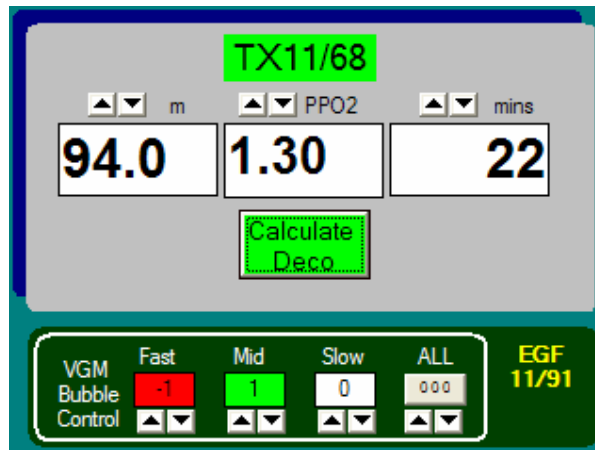

VGM incorporates 5 main features:

1. Bühlmann decompression model
2. Modification of tissue over pressure tolerances or M values for the faster tissues to create a decompression profile similar to a bubble model like VPM
3. Further modification of over pressure tolerances for deep or long exposure dives, especially in the fast and middle order tissues
4. Automatic adjustment of the above parameters to allow the default settings to give common decompression and No Stop times across the range of diving from 10m to 120m
5. User adjustable parameters so the diver can use his/her experience to further modify the decompression to that which suits him/her. The Equivalent Gradient Factors are displayed for a particular dive for ease of comparison with other dive computers and dive tables, although because this system goes beyond Gradient Factors certain adjustments may only give an estimate of the nearest GF equivalent.

A basic version of VGM PC dive planning software VGM ProPlanner is available free from the web site. This allows a quick way to see what decompression the VRx dive computer will give and allow specific conservatism factors to be tried out on the PC before then choosing the right ones for a dive using the VRx. The PC software also gives print outs and an output in common spreadsheet style format for use in creating back-up tables.